


eureka![®]

Invented for the way you clean™

Upright
VACUUM CLEANER
Household Type
OWNER'S GUIDE
2900 SERIES

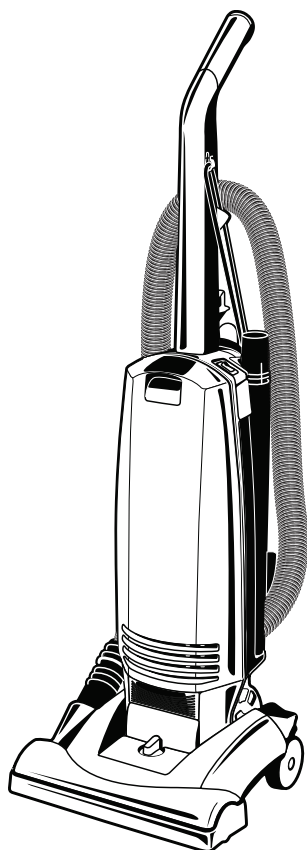

IMPORTANT

Do not return this product to the store.

For assembly problems or questions contact: Eureka's Customer Service Division toll free at 1-800-282-2886*, 8 a.m. to 7:30 p.m., (CST), Monday - Friday and 10 a.m. to 6:30 p.m. Saturday and Sunday.

www.eureka.com

Index

Important Information	2
Assembly Parts.....	3
How to Assemble.....	3-4
How to Use	4
Accessories	5
Filters.....	5
Dust Bag.....	5-6
Brush Roll	6
Brush Roll Belt.....	6
Headlight	7
How to Clear Blockages	8
Troubleshooting.....	9
Warranty	10

Please Retain

We suggest you record the model, type and serial numbers below. They are located on the silver rating plate on your cleaner. For prompt and complete service information, always refer to these numbers when inquiring about service.

Model & Type _____

Serial No. _____

It is also important to keep your receipt as proof of date of purchase.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

WARNING

To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- **Do not leave vacuum cleaner when plugged in.** Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction and contains a revolving brush roll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not place cleaner on furniture or stairs as the brush roll may cause damage. Place cleaner on floor with the handle in storage position while using attachments.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag in place.
- Belt pulleys can become hot during normal use. To prevent burns, avoid touching the belt pulley when servicing the drive belt.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner indoors in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.

SAVE THESE INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury:

To reduce the risk of electric shock, this appliance has an apolarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.



DO NOT OIL the motor or the brush roll. The motor and brush roll are permanently sealed and lubricated.

GENERAL INFORMATION

Use the cleaner to pick up dirt and dust particles. Avoid picking up hard or sharp objects that could damage the vacuum cleaner.

Service Information

The instructions in this booklet serve as a guide to routine maintenance. For additional service information, telephone our toll free number for the nearest Eureka Authorized Warranty Station. **You should know the model, type and serial number or date code when you call:**

USA: 1-800-282-2886


Canada: 1-800-282-2886

If you prefer, you can write to The Eureka Company, Service Division, 807 North Main St., Bloomington, Illinois 61701, USA.

Thermal Cut Off

This vacuum cleaner has a special thermostat that protects the cleaner in case of motor overheating. If the cleaner suddenly shuts off, push the on/off switch off (O) and unplug the cleaner. Check the cleaner for a possible source of overheating such as a full dust bag, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the cleaner. After the 30 minute period, plug the cleaner back in and push the on/off switch on (I). If the cleaner still does not run, then take it to a Eureka Authorized Service Center for repair.

Assembly Parts

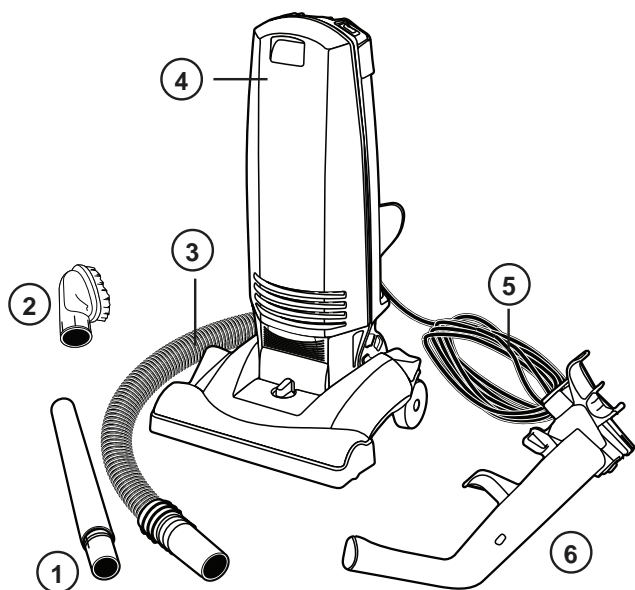


- ① Wand and Crevice Wand. (Pull apart.)
- ② Dusting Brush.
- ③ Hose.
- ④ Vacuum Cleaner Body.
- ⑤ Electrical Cord.
- ⑥ Handle.
- ⑦ Screws located in the accessory package.


How To Assemble

CAUTION: Assemble the cleaner before using.


CAUTION: Moving parts, make sure ON/OFF switch is in the OFF position before plugging in.

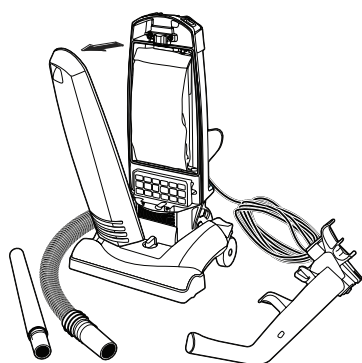


- ① Grasp dust bag cover handle and pull away from vacuum body to remove door.

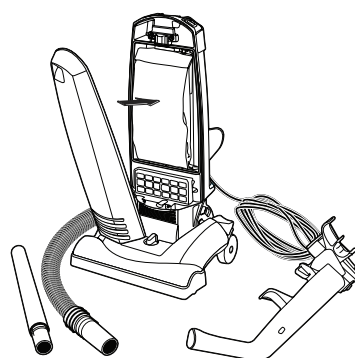

- ④ Place the tabs on the bottom of the dust bag cover into slots at the bottom of the bag compartment and rotate door up and push against the vacuum body until it snaps shut.

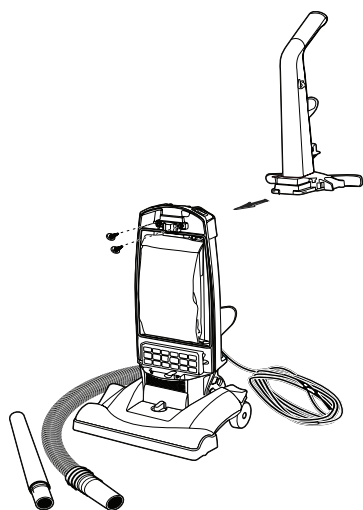


- ② Slide the handle into the grooves at the top of the vacuum body as shown.
- ③ Place the two screws (supplied) into the holes at the top of the bag compartment and tighten with a screwdriver.

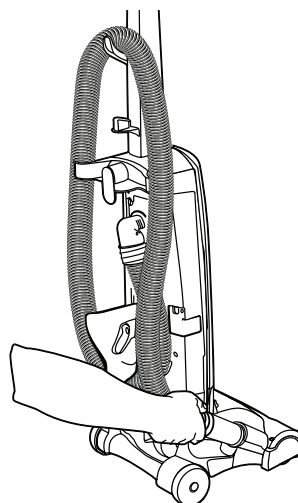


- ⑤ Place the hose on the back of the vacuum, wrapping it up and over the hose hook as shown.
- ⑥ Firmly push the end of the hose into the hose retainer in the hood of the vacuum.


How To Assemble (continued)

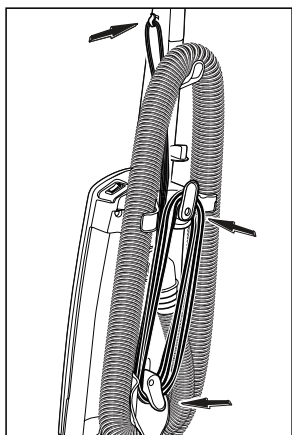

- ⑦ Pull the electrical cord up to the cord retainer and firmly push down into retainer. This will keep the cord out of the way the next time you vacuum.
- ⑧ Wind the cord around the two cord hooks on the back of the vacuum.
- ⑨ Secure plug to the cord to prevent unwinding.

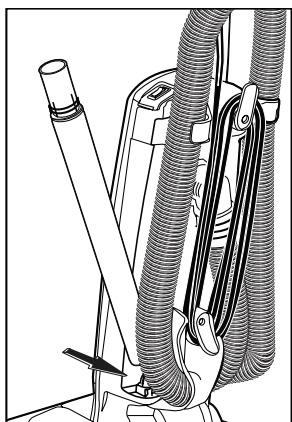

- ⑩ Store the wands on the side of the vacuum in front of the hose.

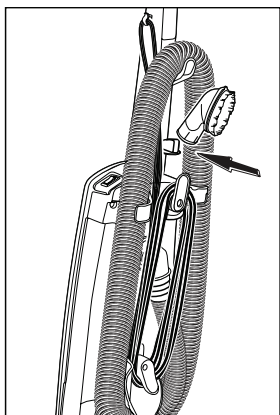


- ⑪ Store the dusting brush.

How To Use


WARNING: Avoid injury. Keep loose clothing, hair, fingers, and all other parts of body away from any moving part (such as the revolving brush). Turn off the switch and unplug the cleaner before changing the cleaner height setting.

ON/OFF Switch.

International symbol **I** means On, International symbol **O** means Off.

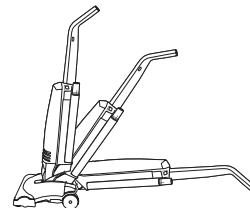

Handle Release. Step on handle release to pull handle back to a comfortable operating position. To lower handle completely to the floor, depress handle release a second time.

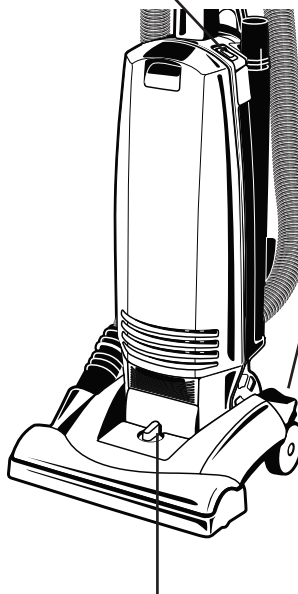

Helpful Information:

Before cleaning under low furniture, check area first for objects that might harm the unit or block the vacuum hose.

Cleaner Height Setting. An adjustment that raises or lowers the cleaner base to match the type of floor surface. With the cleaner cord unplugged, set the adjustment to lowest setting for maximum carpet cleaning. **If the cleaner is difficult to push, move adjustment to next highest setting until cleaner is comfortable to push.** The brush roll must reach the carpet for effective cleaning. For ease in moving the adjustment knob, place handle in operating position.


Helpful Information:

Listen to your cleaner. If you notice a change in the sound of the motor or a change in performance, it could simply indicate a common usage or maintenance issue. Such as, a need to raise or lower the carpet height adjustment, possible blockage in hose or brush roll area, or a broken or loose brush roll belt. These are all easy to fix and the instructions are included in this owner's guide. Becoming familiar with the information in this guide will help you to get the best possible performance from your new cleaner for many years to come.

How To Use (continued)

NOTE: While using accessories, do not place cleaner on furniture or steps as the brush roll may cause damage. Place cleaner on floor with the handle in storage position.


1. To use accessories remove hose from hose retainer in hood of cleaner by lifting up and twisting.
2. Place desired accessory onto end of hose or wand.

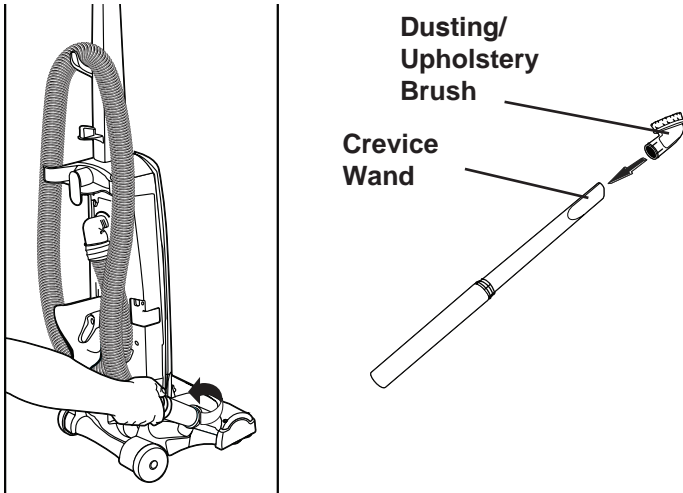

Dusting/Upholstery Brush is for furniture, blinds, books, lamp shades, shelves, curtains, draperies, cushions and fabrics.

Crevice Wand cleans corners, stairs, baseboards, and between cushions.

Nested extension wands to add reach.

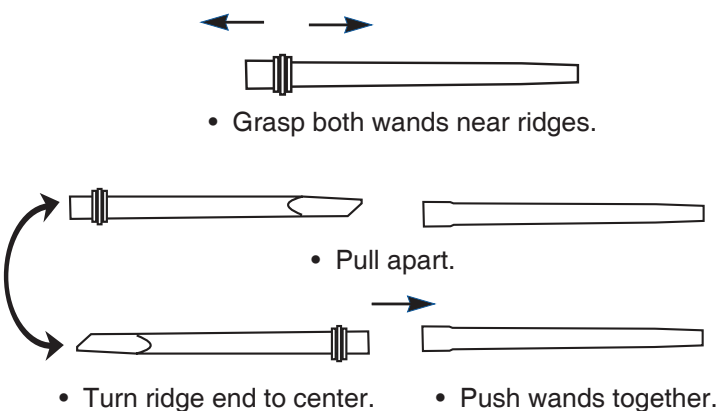


The instructions in this booklet serve as a guide to routine maintenance. To avoid unnecessary service calls, check the dust bag, filters, belt, and brush roll often.

Routine Maintenance


NOTE: Turn off the switch and unplug the electrical cord before routine maintenance. Never operate the vacuum cleaner without the dust bag or filter assembly in place.

NOTE: When vacuuming carpet fresheners or cleaners, powder, plaster dust, or similar fine substances, the dust bag and filters will require more frequent maintenance.

Removing the Dust Bag (Style J):

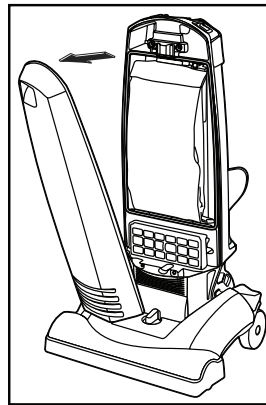


Remove dust bag cover.

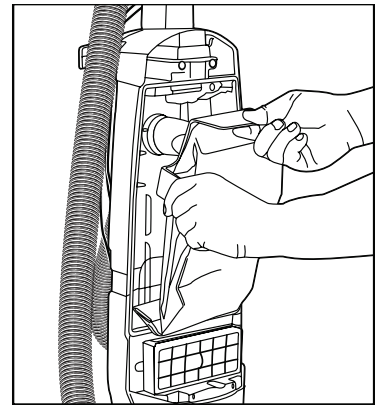

Grasp dust bag flaps and pull dust bag from cleaner.


Check the **filters** each time the dust bag is changed. Clean or replace as needed.

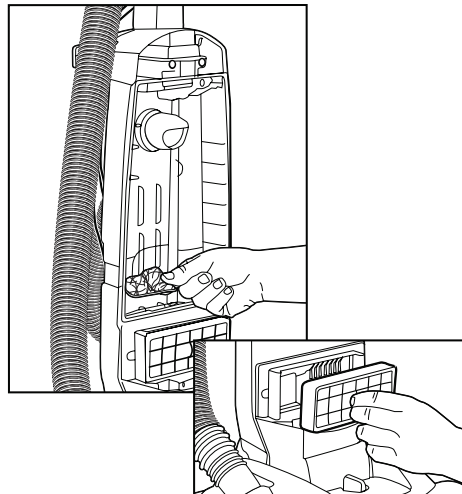


Shake filter to remove excess dust. If necessary, the filters can be cleaned by vacuuming with another cleaner.

Routine Maintenance (continued)

Installing New Dust Bag:

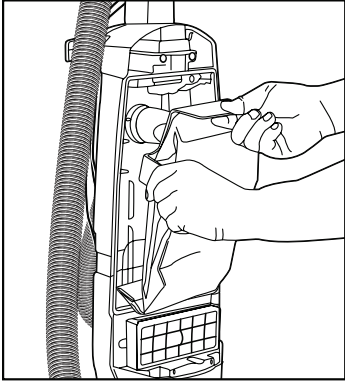


Fold dust bag flaps of new bag back and slide into unit. Make sure inlet goes into opening on dust bag.

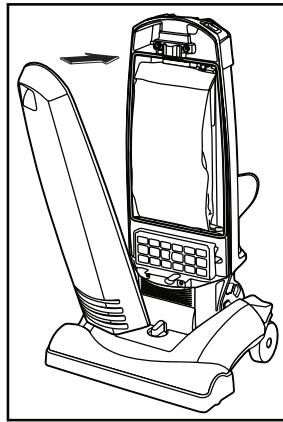


Replace dust bag cover on unit.


NOTE: Dust bag cover cannot be closed unless the dust bag is installed properly.

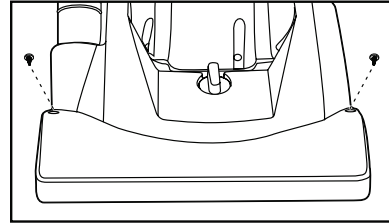


2. Remove the two screws from the top of the hood.

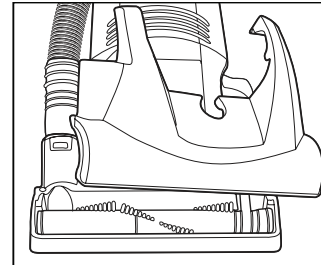

3. Lift hood to remove.

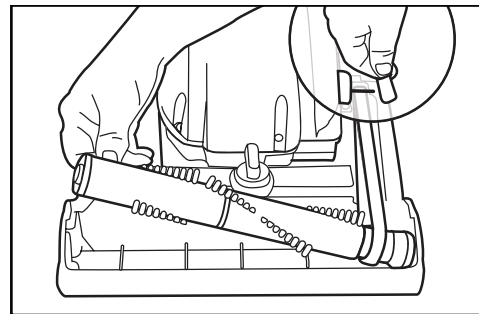

4. Lift left end of brush roll.
5. Remove and discard belt.
6. Place new belt around motor shaft.
7. Place new belt around brush roll pulley.

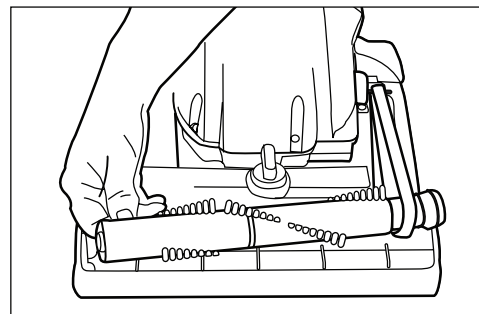

8. Align left end cap with base. Push end cap securely into place.
9. Pull right side of brush roll to stretch belt. Secure right end cap into base.

IMPORTANT

10. Rotate brush roll by hand two full rotations to properly position belt.
11. Place hood back on cleaner. Replace and tighten two screws.
12. Return vacuum to upright position.

Periodic Maintenance

NOTE: Turn off the switch and unplug the electrical cord before periodic maintenance. Never operate the vacuum cleaner without the dust bag or filter assembly in place.


Brush Roll

The brush roll turns as it sweeps and combs the carpet nap. Remove hair and threads from the brush roll so it continues brushing the carpet. To maintain the most efficient cleaning, the bristles must touch the carpet. To test the bristle length, hold a ruler against the underneath side of the cleaner. If the bristles no longer touch the ruler, replace the brush roll.

Brush Roll Belt, Style U

The brush roll belt turns the brush roll to agitate, sweep, and comb the carpet nap. Check the belt regularly to be sure it is in good condition. Replace the belt if it stretches, cracks or loses tension. Cut away any hair or threads wound around the brush roll or the belt pulley because the buildup could cause the belt to rotate unevenly.


How To Replace Brush Roll Belt

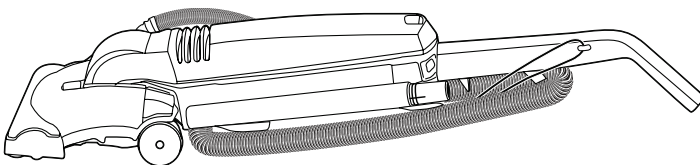


1. Lower handle to floor to change belt.

Periodic Maintenance (continued)


How to Change Light Bulb:

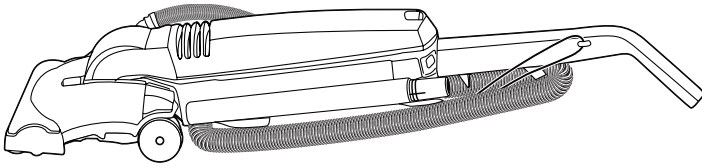

1. Lower handle to floor to change lightbulb.

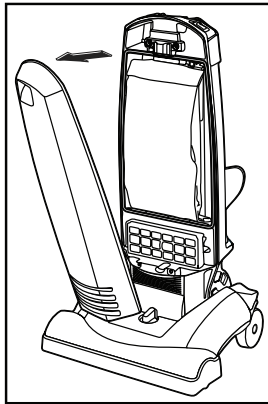


2. Remove dust bag cover.

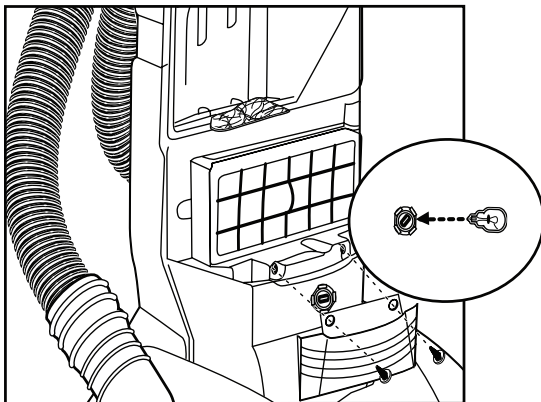

3. Remove the two screws from the lens cover.
4. Pull old light bulb out of socket.
5. Push new lightbulb into socket.
6. Replace lens cover.
7. Secure with screws.


NOTE: Use automotive style 904 rated 12V., 10W., bulb only. Eureka part number, 57940-2.

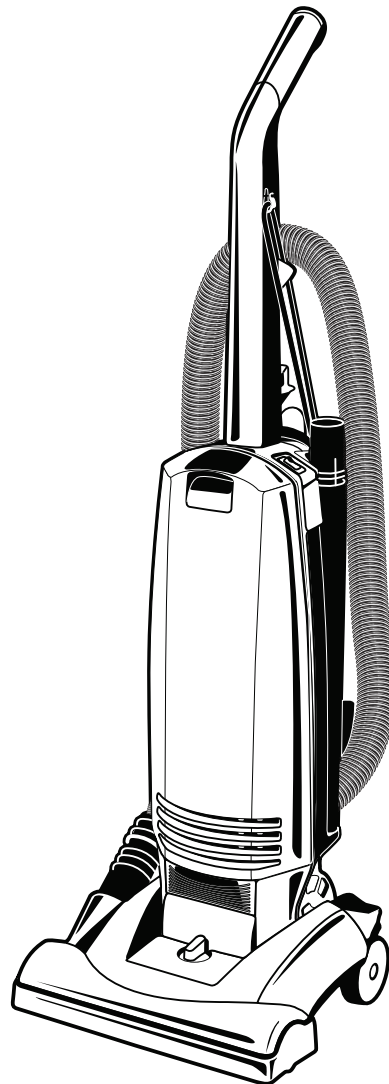

8. Return vacuum to upright position.


To Clear Blockages in Hose

NOTE: Turn off the switch and unplug the electrical cord before clearing hose.

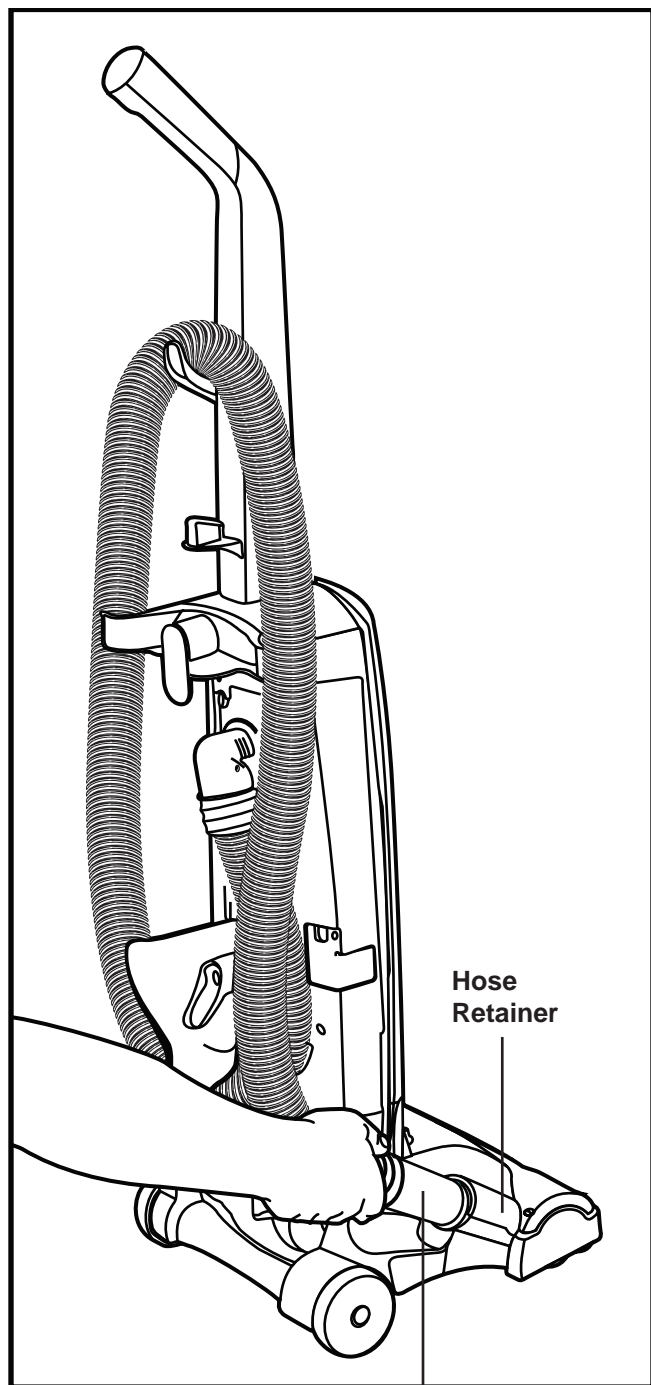


1. Firmly pull the end of the hose from the hose retainer on the hood of the vacuum.
2. Check for blockages in the hose and hose retainer. Flexing the hose may help loosen any blockage. **If no blockage is found, continue to step 4.**

If blockage is found, clear the blockage and replace the hose in the hose retainer. **If the blockage is in the hose retainer and cannot be cleared, continue to step 3.**

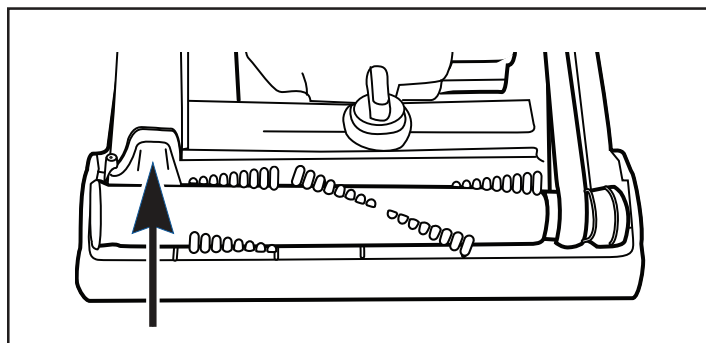

3. Remove the hood from the cleaner and check for a blockage in the brush roll area. Make sure the hose inlet is clear. **If no blockage is found, continue to step 4.** After the blockage is found and cleared, replace the hood on the cleaner.

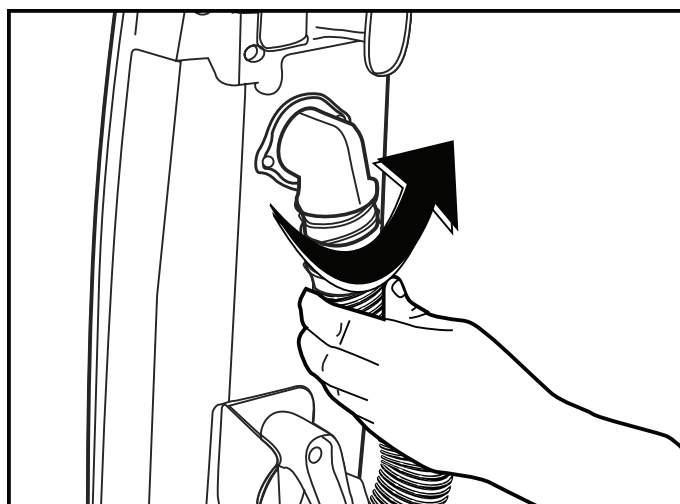

4. Twist the hose from the coupling elbow on the back of cleaner. Check for blockages at cleaner opening and in hose. If a blockage is found, clear the blockage. The two screws attaching the clear hose adapter can be removed for better access to a blockage.
5. Screw the hose back onto the back of the cleaner and replace the other end of the hose into the hose retainer on the hood of vacuum.

PROBLEM SOLVING

NOTE: Turn off the switch and unplug the electrical cord before servicing.

PROBLEM	CAUSE	SOLUTION
Motor will not start.	Electric Plug	<input type="checkbox"/> Push plug securely into outlet. <input type="checkbox"/> Try another outlet. <input type="checkbox"/> Check circuit breaker.
Motor suddenly stops.	Thermal Cut Off	<input type="checkbox"/> Page 2.
Does not clean the carpet or floor.	Filters Dust Bag Hose Belt Brushroll	<input type="checkbox"/> Clean or replace the filters. Hint: If picking up fine dust, the filters may <u>not</u> look dirty but a fine substance tends to reduce suction when it blocks the airflow through the filter(s). Page 5. <input type="checkbox"/> Replace the dust bag with a new dust bag. Page 6. <input type="checkbox"/> Be sure the dust bag is properly seated into the cleaner body. Page 6. <input type="checkbox"/> Be sure hose adapter is secure on back of cleaner. Page 8. <input type="checkbox"/> Remove any blockages from the hose that restricts the airflow. Page 8. <input type="checkbox"/> Check to see that the end of the hose is firmly pressed into the hose retainer in the hood of the vacuum. <input type="checkbox"/> Check base hose and long hose. Page 8. <input type="checkbox"/> Replace a broken, cut, loose or out of shape belt. <input type="checkbox"/> Clean hair and thread from bristles and end cap area. Replace brush roll if bristles are worn.
No suction at the end of hose.	Hose Adapter Filters Hose Dust bag	<input type="checkbox"/> Be sure hose adapter is secure. Page 8. <input type="checkbox"/> Clean or replace the filters. Hint: If picking up fine dust, the filters may not look dirty, but a fine substance tends to reduce suction when it blocks the airflow through the filters. <input type="checkbox"/> Remove any clogs from the hose that restricts the airflow. Check base hose and long hose. Page 8. <input type="checkbox"/> Change dust bag.
Headlight not working.	Light Bulb	<input type="checkbox"/> Replace light bulb. Page 7.
Noise from the brush roll area.	Brush Roll Belt	<input type="checkbox"/> Remove hood and clean debris or items from the brush roll area. <input type="checkbox"/> Replace a broken, cut, loose or out of shape belt. Page 6.
Cleaner is hard to push.	Cleaner Height Setting Belt	<input type="checkbox"/> Put handle in operating position. Tilt the cleaner back to raise the front wheels off floor. Then turn the knob to a higher setting. <input type="checkbox"/> Replace a broken, cut, loose or out of shape belt. Page 6.
Cleaner height knob will not turn	Cleaner Height Setting	<input type="checkbox"/> Hint: Put handle in operating position. Tilt the cleaner back to raise the front wheels off floor. Then turn the knob.
Questions?		Call 1-800-282-2886 between 8 a.m. to 7:30 p.m., (CST), Monday - Friday and 10 a.m. to 6:30 p.m. (CST) Saturday and Sunday. Know the model and serial numbers when you call.

THE EUREKA LIMITED WARRANTY

What This Warranty Covers

Your Eureka cleaner is warranted to be free from all defects in material and workmanship in normal household use for a period of one year. The warranty is granted only to the original purchaser and members of his or her immediate household. The warranty is subject to the following provisions:

What This Warranty Does Not Cover

- Parts of the cleaner that require replacement under normal use, such as disposable dust bags, filters, drive belts, light bulbs, brushroll bristles, impellers and cleaning.
- Damages or malfunctions caused by negligence, abuse, or use not in accordance with the Owner's Guide.
- Defects or damages caused by unauthorized service or the use of other than Genuine Eureka parts.

What Eureka Will Do

Eureka will, at its option, repair or replace a defective cleaner or cleaner part that is covered by this warranty. As a matter of warranty policy, **Eureka will not refund the consumer's purchase price.**

Warranty Registration

Please fill out and return the warranty registration card accompanying your cleaner.

Obtaining Warranty Service

To obtain warranty service you must return the cleaner or cleaner part along with "proof of purchase" to any Eureka Authorized Warranty Station.

For the location of the nearest Eureka Authorized Warranty Station or for service information visit www.eureka.com, or telephone toll free:

USA: 1-800-282-2886
Canada: 1-800-282-2886
www.eureka.com

If you prefer, you can write to Electrolux Home Care Products North America, P.O. Box 3900, Peoria, Illinois 61612, USA. In Canada write to Electrolux Home Care Products Canada, 5855 Terry Fox Way, Mississauga, Ontario L5V 3E4.

If it is necessary to ship the cleaner outside your community to obtain warranty repair, you must pay the shipping charges to the Eureka Authorized Warranty Station.

Return shipping charges will be paid by the Warranty Station. When returning parts for repair, please include the model, type, and serial number from the data plate on the cleaner.

Further Limitations and Exclusions

Any warranty that may be implied in connection with your purchase or use of the cleaner, including any warranty of Merchantability or any warranty for Fitness For A Particular Purpose is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall the manufacturer be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the cleaner. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights, which may vary by state.



For orders in U.S.
Para pedidos en los EE.UU.

PARTS ORDER FORM

FORMULARIO DE PEDIDO DE PIEZAS



www.EUREKA.com

For faster service, visit us Online
Para obtener un servicio más rápido,
haga los pedidos por Internet



By Phone:
Por Teléfono: **1-800-282-2886**

HOURS: Call Monday–Friday, 8 am–7:30 pm CST; Saturday and Sunday, 10 am–6:30 pm CST (Please call the same number for answers to problems or questions in the USA and Canada)

HORARIOS: Llame de lunes a viernes de 8 am a 7:30 pm CST y sábados y domingos de 10 am a 6:30 pm CST (Llame a este mismo número para consultas o preguntas en EE.UU. y Canadá)

Genuine Eureka Accessories, Bags, Belts and Filters Accesorios, bolsas, correas y filtros legítimos Eureka	Part No. N° de parte	Qty. Cant.	Price (USD)* Precio (USD)*	Total Total
Disposable Bags (style J) - package of 3 Bolsas descartables (tipo J) – paquete de 3	61515B		\$3.99	
Disposable Bags (style J Premium) - package of 3 Bolsas descartables (tipo J de calidad superior) – paquete de 3	61995A		\$4.99	
Disposable Bags (style J Synthetic with ARM & HAMMER® inside) - package of 3 Bolsas descartables (sintéticas tipo J con ARM & HAMMER® en el interior) – paquete de 3	63292		\$8.99	
Pre-Motor Filter Filtro Previo al Motor	72469		\$2.49	
Exhaust Filter - for non-HEPA models with frame Filtro de salida para modelos sin filtro HEPA con bastidor	61528		\$3.49	
Style HF-7 with ARM & HAMMER® inside Estilo HF-7 con ARM & HAMMER® en su interior	61850B		\$7.99	
Belts (style EXT-U) - package of 2 Correas (tipo EXT-U) – paquete de 2	61120C		\$2.99	
Nested Wands (straight & crevice) Tubos telescópicos (recto y para rincones)	71492A		\$6.49	
Combination Brush Cepillo combinado	60990-3		\$5.49	
Hose Assembly Ensambalaje de la Manguera	62071-1		\$23.99	
Headlight Foco de luz Frontal	57940-3		\$1.59	
Stair Hose Manguera Para Escaleras	60038-8		\$10.49	
Turbo Nozzle - Pet Power Paw® Boquilla Turbo - Pet Power Paw®	62550C		\$15.99	

TOTAL: *prices subject to change without notice
TOTAL: *precios sujetos a modificación sin previo aviso

TAX: (add state tax and local taxes as required by law)
IMPUESTOS: (agregar el impuesto estatal y los impuestos locales según las leyes)

POSTAGE AND HANDLING CHARGE (within USA)
GASTOS DE ENVÍO (dentro de EE.UU.)

TOTAL ENCLOSED (A + B + C = D)
TOTAL INCLUIDO (A + B + C = D)

A
B
C
D

IMPORTANT / IMPORTANTE

MODEL NUMBER TYPE
NÚMERO DE MODELO TIPO
SERIAL NUMBER
NÚMERO DE SERIE

Be sure to include your model, type and serial numbers.
These numbers may be found on the rating plate.

Asegúrese de incluir los números de modelo, tipo y serie.
Estos números se encuentran en la placa de datos.



By Mail: / Por Correo:

Simply fill out this Order Form. Please be sure to include your phone number.

Llene simplemente este formulario de pedido.
Asegúrese de incluir su número telefónico.

1) SHIP TO: / ENVIAR A:

Name / Nombre

Address / Dirección

City / Ciudad

State / Estado

Zip Code / Código Postal

Telephone (Very Important) / Teléfono (Muy Importante)

2) PAYMENT: / PAGO:

(no C.O.D. Orders) (no se aceptan órdenes de pago contra entrega)

☐ Check or money order. Do not send currency.
☐ Cheque o giro postal. No envíe dinero en efectivo.

☐ VISA ☐ DC ☐ MC ☐ AMEX

ACCT. NUMBER / NÚMERO DE CUENTA

EXPIRATION DATE
FECHA DE VENCIMIENTO

X

SIGNATURE (full name as shown on acct.)
FIRMA (nombre completo como aparece en la cuenta)

3) PAYABLE TO: / PAGADERO A:

Electrolux Home Care Products, Inc.
P.O. Box 3900
Peoria, IL 61612

PN 73287A (08/09)

© 2009 Electrolux Home Care Products, Inc.

Printed in China

Impreso en China

*ARM & HAMMER and the ARM & HAMMER logo are trademarks of Church & Dwight Co., Inc.

*ARM & HAMMER y el logotipo ARM & HAMMER son marcas comerciales de Church & Dwight Co., Inc.